

NX300 - Suratgarh Main-Standby Transmitter System

All India Radio (AIR)

## **APPENDIX C**

#### ANTENNA TUNING UNIT

Issue 0.2 ...... 09 October 2014

#### **Nautel Limited**

10089 Peggy's Cove Road, Hackett's Cove, NS, Canada B3Z 3J4 T.877 6 nautel (628835) or +1.902.823.2233 F.+1.902.823.3183 info@nautel.com

U.S. customers please contact:

#### Nautel Inc.

201 Target Industrial Circle, Bangor ME 04401 T.877 6 nautel (628835) or +1.207.947.8200 F.+1.207.947.3693 info@nautel.com

e-mail: support@nautel.com www.nautel.com

## **INSTALLATION INSTRUCTIONS**

## FOR RF EQUIPMENT TO BE INSTALLED IN TUNING HUT AT THE 918 KHZ STATION

AIR SITE PROJECT

**SURATGARH** 

Kintronic Laboratories, Inc. Bristol, TN

# **Table of Contents:**

Table of Contents:	2
Tools and Materials Required:	3
General Instructions	
Inventory and Staging of Parts	4
Building Measurements	
Overview of Installation Steps	
Detailed Installation Procedure	
A. Floor Layout Panels	7
B. Critical Overview of Component Installation	
C. Installation of Floor-Mounted RF components	
D. Installation of Copper Pipe Bus-Work	
E. Installation of Vacuum Capacitors	
F. Installation of Auxiliary Equipment	

## **Tools and Materials Required:**

#### (Not supplied by KTL):

- 1. Duct Tape or similar adhesive tape, for securing the floor layout panels
- 2. Masonry drill bits, suitable for drilling in concrete (1/4" or metric equivalent and recommended)
- 3. Vacuum cleaner for cleaning out drilled holes in concrete.
- 4. ¼" Hardware anchors suitable for use with concrete or similar, as appropriate for the actual construction material used to construct the Tuning Houses.
- 5. "English" –sized Allen wrench set
- 6. "English" -sized wrench set
- 7. Hammer
- 8. Drill capable of drilling concrete
- 9. Tin Snips
- 10. Screw Driver Set
- 11. Flux
- 12. Silver Solder
- 13. Crescent Wrenches
- 14. Oxygen and Acetylene Torch Set

#### (Supplied by KTL):

- 15. Hardboard Floor Layout Panels
- 16. Drawings used for component layout, measurements, and assembly of parts included in this installation manual.

a.	RF Schematic	KTL Dwg A-6230-SUR
b.	Active Component Layout	KTL Dwg A-6246-SURA
c.	Active Floor Panel Layout	KTL Dwg C-4258-SURA
d.	Passive Component Layout	KTL Dwg A-6246-SURP
e.	Passive Floor Panel Layout	KTL Dwg C-4258-SURP

17. RF Components as specified in RF Schematic.

### **General Instructions**

These instructions are to be used in conjunction with the final drawing package for the ATU Network supplied by Kintronic Labs (KTL) for installation at the tower base.

Before beginning the actual installation process, it is recommended that these instructions be read through in their entirety, and also that the drawings referred to in the instructions are reviewed in connection with the specific steps in which these drawings are referenced.

#### **Inventory and Staging of Parts**

Next, to prepare for the installation process, it is important to insure that all of the parts and components are accounted for, and ready to be used when needed. An appropriate location (such as the Transmitter Building) should be used as a staging area.

Using the RF Schematic and the Component Layout Drawing, a complete inventory should be made of the components and checked against the drawings for completeness. These include:

- coils mounted on component panels
- component panels for capacitors
- capacitors in boxes (NOTE: keep all capacitors in their respective protective boxes until it is time to install them per the instructions)
- Arc Gap Assemblies
- Grounding Switch Assemblies
- Meters and meter toroids (keep meters in boxes until installation)
- Hardware, and other misc. parts

Make a complete inventory of all of the interconnecting bus-work pipe sections, each of which has been wrapped and labeled individually. Keep the pipe sections in their protective wrap until it is time to install in the system.

#### **Building Measurements**

These instructions have been written with the underlying assumption that the building size correctly matches the dimensions indicated on the KTL drawing set, that the walls are plumb and vertical, that the wall-to-wall and wall-to-floor interfaces are square, and that all mounting surfaces are flat and even.

Since these dimensions are critical for the successful installation of the equipment, the following measurements should be made before bringing any parts or equipment into the ATU building. **NOTE:** If any discrepancies are discovered, KTL should be contacted immediately, in order to determine the impact they have on the installation process, and whether corrective action or changes will be advised.

Measure all dimensions of the building interior, and compare to the dimensions as indicated on the relevant drawings. In particular, measure the interior width of the building at both the front end and at the rear end of the building, and also measure the interior depth of the building on both right and left sides of the building.

Take note of the locations of the openings in the wall for the <u>RF input</u> (which will connect to the transmission line from the Transmitter Building) and the <u>RF output</u> (which provides the interface to the Tower. Measure the size of each opening, and make measurements needed to determine its exact location, and compare these measurements to the KTL layout drawings.

Note: If floor dimensions deviate from those indicated on the KTL Component Layout Drawing by more than 2.5 cm (1 inch) for either the length or the width, please contact KTL or designated representative to discuss the best means of compensating for the discrepancy during the assembly and installation process.

#### **Overview of Installation Steps**

Before presenting the detailed installation steps, the present section presents an overview of the basic approach that will be taken in the installation of the RF equipment into the ATU building.

The basic steps to be taken are as follows:

- 1. Inventory the components and parts needed for the assembly, and carefully measure the interior of the building to verify dimensions. (These steps are covered above in "General Instructions.")
- 2. Place the Hardboard Floor Layout Panels onto the floor.
- 3. Drill the mounting holes into floor using Floor Layout Panels as a template.
- 4. Remove the Floor Layout Panels one at a time, and mark onto the concrete floor the identification, orientation and position of each floor-mounted component appearing on each Floor Layout Panel, as each panel is removed.
- 5. Become familiar with the pictures showing the factory mock-up of the ATU and review these pictures against the RF schematic and the Component Layout drawing.
- 6. Starting with the reference corner of the building, place component panels on the floor.
- 7. Verify correct placement by temporarily installing associated bus-work pipe between components.
- 8. Remove any interconnecting pipe that was temporarily connected to components, and then remove the floor-mounted components that were used in the previous step.
- 9. Install the Safety Screen wall, and secure with hardware.
- 10. Install the Floor-mounted component panels, and secure with hardware.
- 11. Install the interconnecting bus-work pipe sections for the floor-mounted components.
- 12. Install the capacitors onto their component panels.
- 13. Check out entire RF system as assembled and compare to the RF schematic and relevant KTL drawings.
- 14. Install the auxiliary components and equipment (meters, grounding switches, arc gaps, etc.)

#### **Detailed Installation Procedure**

#### A. Floor Layout Panels

- 1. Refer to the ATU floor layout drawing. This drawing provides an overall dimensional view of the major structural elements of the ATU building, without the RF components. This drawing also shows the placement of the input and output panels relative to the rest of the building.
- 2. Locate the 4' x 8' x 1/8" Hardboard panels that will be used as a layout pattern for the floor of the ATU RF components. Referring to the ATU floor layout drawing, the panels should be placed tightly together leaving no spaces between the panels. The proper placement of the components has been marked on the panels, and these markings can also be used as a guide to ensure that the panels are correctly placed. Duct tape or similar adhesive tape may be used to secure the Hardboard panels into place, once they have been all correctly placed.

Note the location in the drawing for the "Reference Corner", and the locations of the RF input and the RF output for the ATU building. Also refer to the photos of the factory mockup of the system for which the components have been removed from the floor, leaving only the Hardboard template.

- 3. After the Hardboard layout pattern is fully assembled and secured, pre-drill all the marked hole locations for each panel with a 5/16" nominal drill bit through Hardboard material and copper if necessary. Make sure the holes are drilled vertical to the floor and are drilled completely through the Hardboard, and then using 1/4" masonry drill bit (or nearest size that corresponds to the concrete anchor bolt sizes that will be used.), drill anchor holes in the concrete floor using Hardboard template. The holes must be drilled to the appropriate depth dictated by the concrete anchors being used to secure the panels to the concrete floor.
- 4. When all of the marked hole locations have been pre-drilled, remove the Hardboard sheets one at a time. As each Hardboard sheet is removed, mark each component number on the floor for the placement of each component.
- 5. Make sure all of the mounting holes have been drilled to the correct depth for all mounting holes in the floor. When all the holes have been drilled, clean out the debris from the holes with a vacuum cleaner. Then, install the hardware anchors into the holes in the concrete for each component panel. To ensure that all of the holes have been included, do this for only one component panel at a time.

#### B. Critical Overview of Component Installation

- 1. This is an important overview section, which will make it easier to identify each RF component in the system, and also ensure that each component will be located in its proper position and orientation. While going through this overview section, refer to the RF schematic and Component Layout Drawing.
- 2. The Component Layout Drawing shows the correct placement of all the RF components.
- 3. The set of factory photos of the ATU network mockup provide numerous examples of the components mounted on their respective component panels, as well as the identifying labels that are used on all components and all relevant drawings. An example photo noting typical ATU components is given below (Note the photo is not for this particular system, but is a representative factory photo).

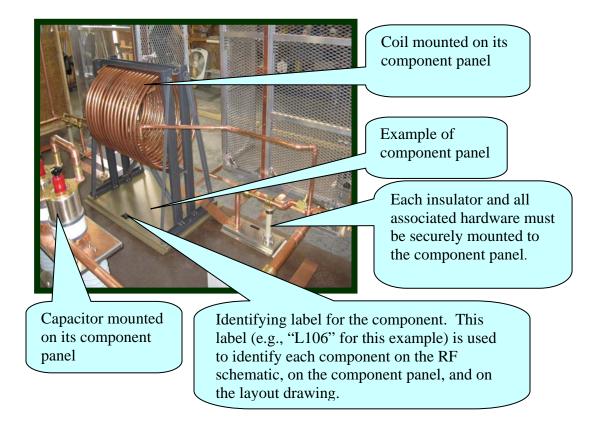


Figure 1: Component Panel details

- 4. While using the factory mockup photos as a guide, trace through the RF schematic for the ATU system, starting at the RF input, and working through to the RF output. As the components are identified in the RF schematic, the corresponding location of the component should be identified in the component layout drawing, and also observed in the corresponding photo(s).
- **5.** During the actual installation of the components, which is covered in the following sections, the factory mockup photos should be referred to as needed for clarification.

#### D. Installation of Floor-Mounted RF components

- 1. Refer again to the ATU floor layout drawing, showing the correct placement of all the RF components.
- 2. Make sure all of the mounting holes were drilled to the correct depth for anchoring the floor-mounted components, and that all the holes have been cleared of debris using the vacuum cleaner.
- 3. When all the holes have been drilled and vacuumed, install the hardware anchors into the holes in the concrete for each component panel. To ensure that all of the holes have been included, do this for only one component panel at a time.
- 4. Find all the floor-mounted component panels, as labeled on the drawing. Make sure all insulators and hardware are securely mounted on each component panel. Install each component panel as shown in the ATU floor layout drawing. Make sure each component is oriented in the correct direction (refer to photos as needed).
- 5. Note: Do not install any of the capacitors yet. Only install the component panels at this time. The capacitors will be mounted on these panels in a later step.
- 6. The correct orientation for each component may be determined by carefully examining the photographs from the factory mockup of the ATU. The final verification of the correct position and orientation will be made when the interconnecting copper pipe sections are installed. In order for the copper pipe sections to mate properly with the components, the components must be positioned and oriented correctly.

#### E. Installation of Copper Pipe Bus-Work

- 1. Locate the copper pipe for the RF components. Each piece of copper pipe is labeled on the outside of the protective wrapping to show which components are to be connected with that particular piece of pipe. When you remove the protective wrapping you will see that each end of the pipe has also been marked so as to indicate the component that it connects to on that end of the pipe.
- 2. Install the pipe sections for the interconnections between each component, ensuring the label on the copper pipe (hand marked in ink) and the component numbers (engraved tag on panel) match correctly. Make sure all the connections are tight.
- 3. Many of the pipe sections are connected together through the use of "splitters." The splitters are used to allow for small length adjustments. Each splitter will allow for an adjustment of up to ~ 1 cm. If a greater adjustment than this is required, it is possible that adjustments in positioning might be required somewhere else in the system. A splitter is illustrated below.

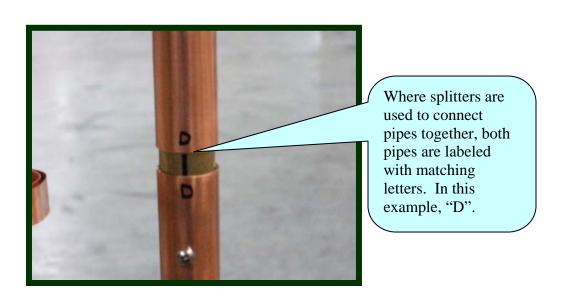


Figure 3: Example of bus work splitter


4. After all of the pipe sections have been secured, go through the system and make sure that all the splitter connections have been tightened.

#### F. Installation of Vacuum Capacitors

- 1. Reserve the actual installation of the capacitors themselves until it is absolutely necessary. This will help prevent damage to the capacitors. The vacuum capacitors used throughout this system are both **fragile** and **expensive**. They should be handled carefully to prevent damaging them.
- 2. First install the variable capacitors. Note that variable capacitors must be installed with the knob oriented in the proper direction. Most variable vacuum capacitors will be packed with the mounting plate factory installed on the end of the capacitor that has the adjustment knob. For the few that may not, note that one of the two mounting plates or brackets will have a large clearance hole in the center. The end of the capacitor with the adjustment knob must mount on this plate so that the knob passes down through this clearance hole. Refer carefully to the factory mockup photos to ensure that the variable capacitors are being oriented properly.
- 3. After the variable capacitors have been installed, locate any fixed capacitors in the system and install them on their appropriate locations. Install each capacitor in its proper location by matching the component labels and referring to the factory mockup photos.
- 4. For each of the capacitors, make sure that all of the hardware has been tightened.
- 5. Refer to the RF schematic. After all of the capacitors have been installed, use the RF schematic to trace through the entire RF network, to ensure that all the interconnections correctly match the schematic. Make sure that all hardware has been tightened properly.

#### G. Installation of Auxiliary Equipment


- 1. Locate the remote meters for the input and output RF current.
- 2. Each meter has been calibrated together with its toroid and cable as a matched set. Use the serial numbers to match each meter with the correct transformer.
- 3. For each meter/toroid combination, temporarily route the cable that connects them to make sure that the cable routing allows a proper connection on each end without causing stretching or strain of the cable. When a suitable routing has been determined, the cable can then be routed and secured properly. Note that the cable must remain tight against the copper wall/floor or in grounded conduit for protection.
- 4. Mount the meters in the correct hole marked by the labels on the front of the safety screen wall.
- 5. The factory mockup photos will show the locations of the meters.
- 6. A typical example photo showing the meters mounted is below. This shows the meters as seen from inside the RF compartment. The meters are to be read and operated from the safe side of the safety screen wall.

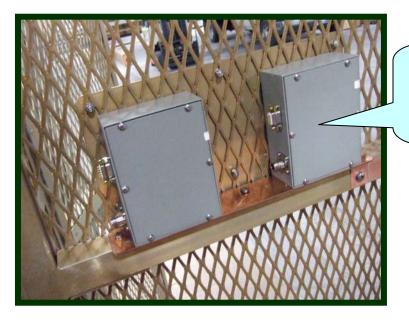


Close-up of back of RF current meters from the inside of safety screen wall


Figure 4: Rear view of meters


This completes the ATU network installation. Refer questions to Kintronic Labs, Inc. Engineering Dept.

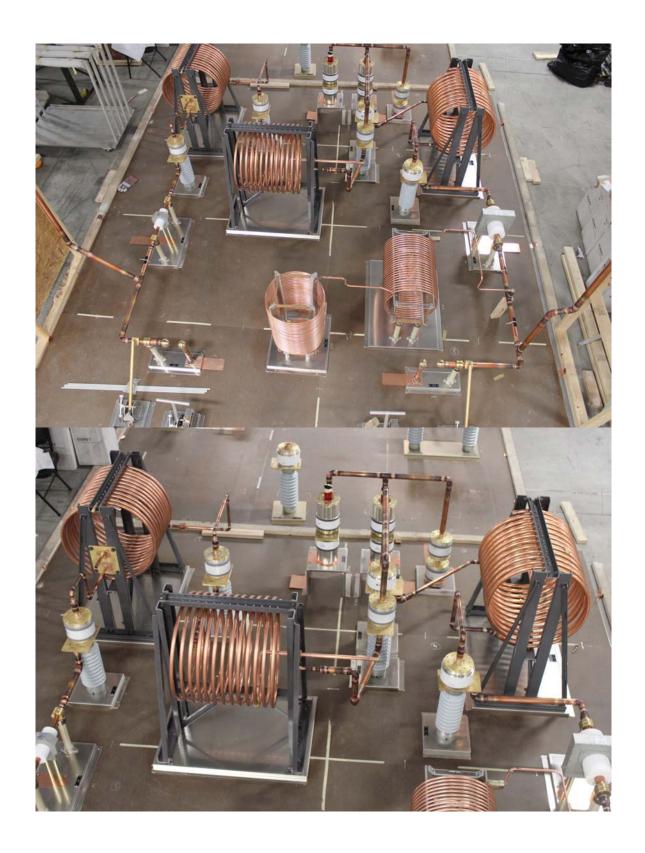



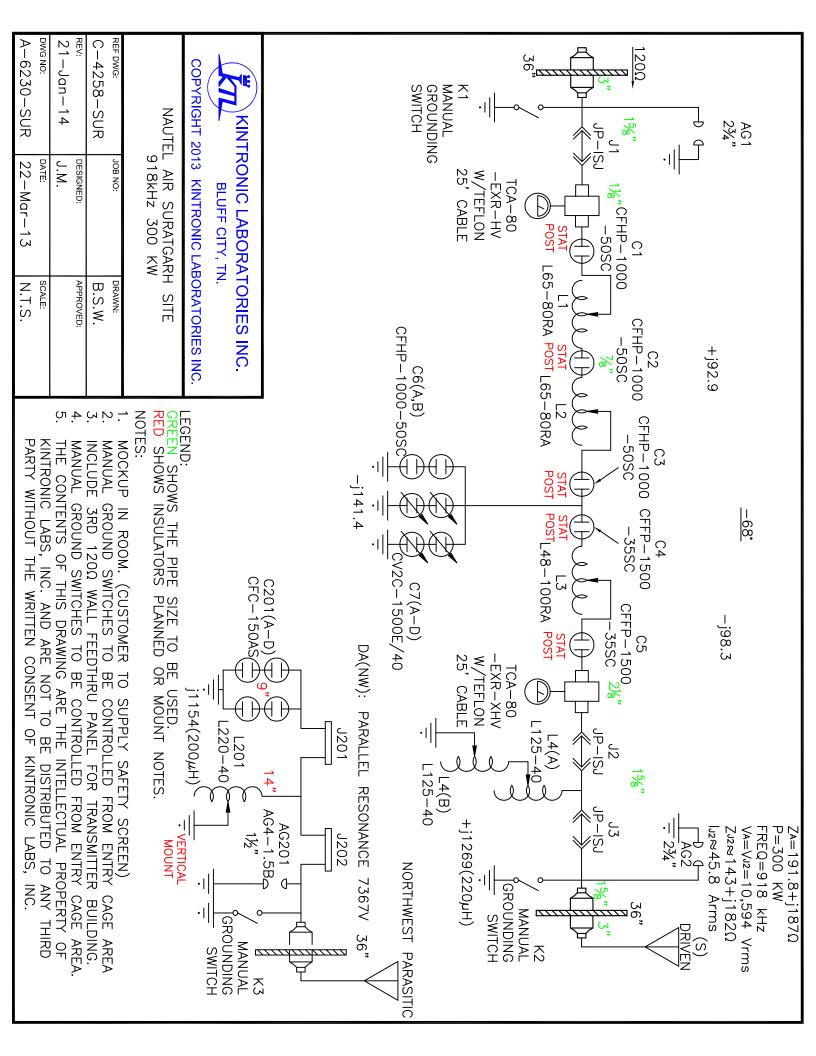

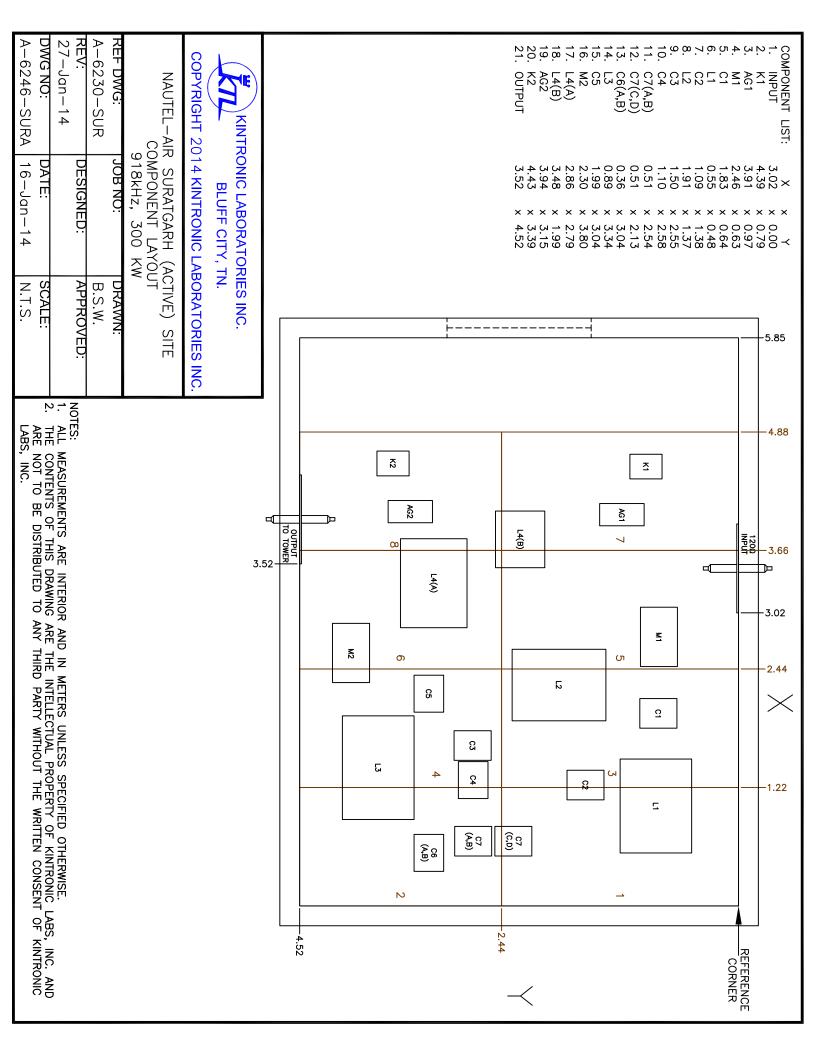

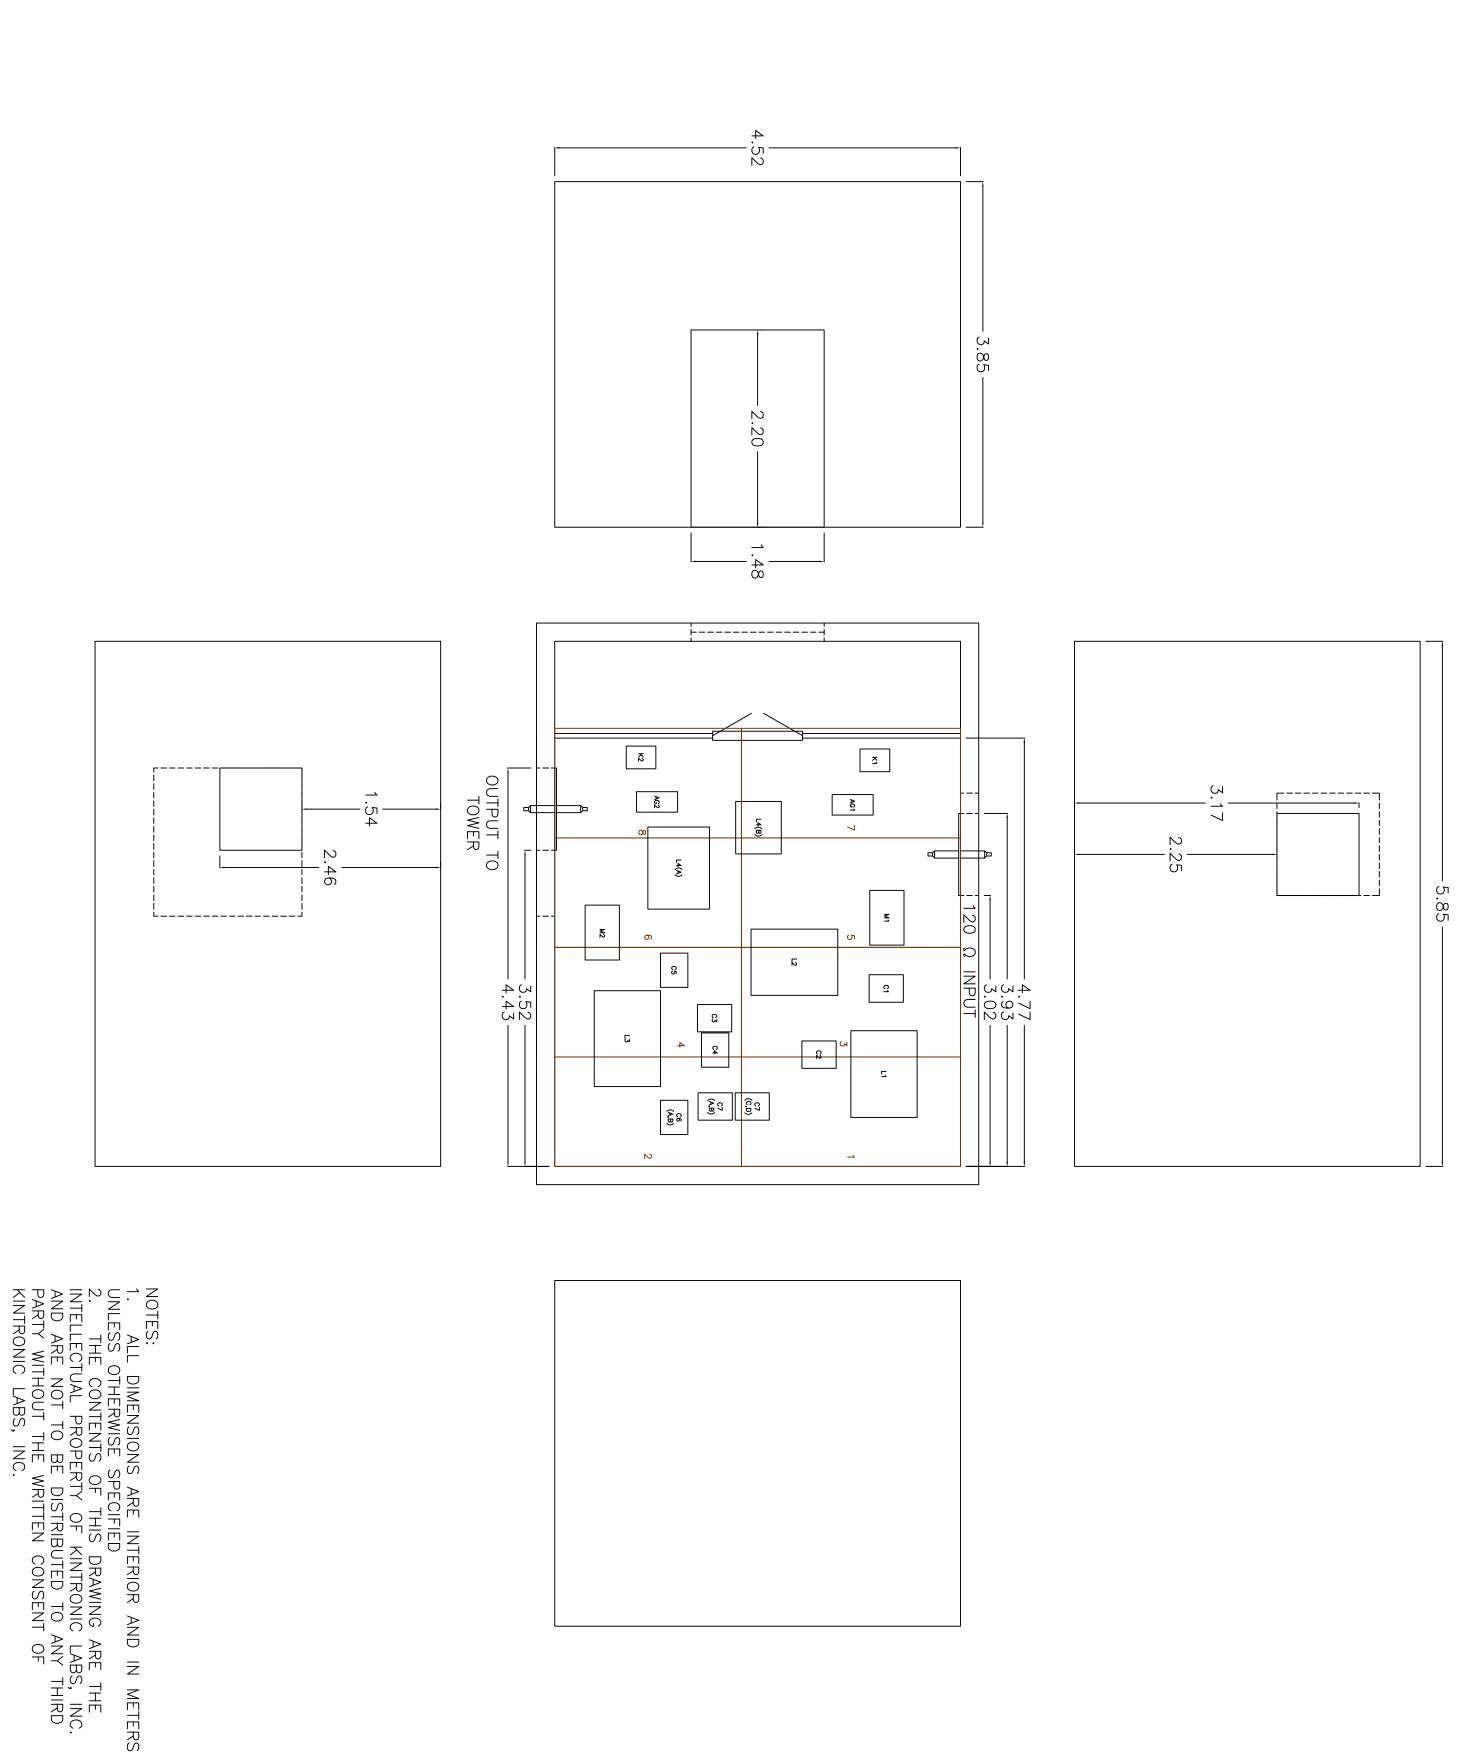

PRE-EXISTING ATU BUILDING

•	DW	27-	REV:	<b>&gt;</b> −	Z T		
C-4258-SURA 28-Mar-13	DWG NO:	27-Jan-14	.: 	A-6230-SUR	REF DWG:	(6	)
28-Mar-13	DATE:		DESIGNED:		ON BOL	918 kHz 300 kW	
N.T.S.	SCALE:		APPROVED:	B.S.W.	DRAWN:	V	<u>`</u>

	7.		Ċī	4.	3.	2.		CO
!	L201	C201(C,D)	C201(A,B)	J201,J202	AG201	$\Sigma_{\alpha}$	OUTPUT	MPONENT LIST:
	1.50	1.56	1.56	0.72	0.61	0.31	0.00	×
:	×	×	×	×	×	×	×	×
	1.17	0.61	0.27	0.51	1.26	1.78	0.73	~

2.96 2.44 (c,D) (A,B) L201 N 1.22 1020 AG201 J202 ជ OUTPUT TO TOWER -2.44-0.73 -2.97 REFERENCE CORNER

# KINTRONIC LABORATORIES INC. BLUFF CITY, TN.

COPYRIGHT 2014 KINTRONIC LABORATORIES INC.


NAUTEL—AIR SURATGARH (PASSIVE) SITE COMPONENT LAYOUT 918kHz, 300 KW

REF DWG:	JOB NO:	DRAWN:
A-6230-SUR		B.S.W.
REV:	DESIGNED:	APPROVED:
16-Jan-14		
DWG NO:	DATE:	SCALE:
A-6246-SURP 16-Jan-14	16-Jan-14	N.T.S.

NOTES:

1. ALL MEASUREMENTS ARE INTERIOR AND IN METERS UNLESS SPECIFIED OTHERWISE.

2. THE CONTENTS OF THIS DRAWING ARE THE INTELLECTUAL PROPERTY OF KINTRONIC LABS, INC. AND ARE NOT TO BE DISTRIBUTED TO ANY THIRD PARTY WITHOUT THE WRITTEN CONSENT OF KINTRONIC LABS, INC.

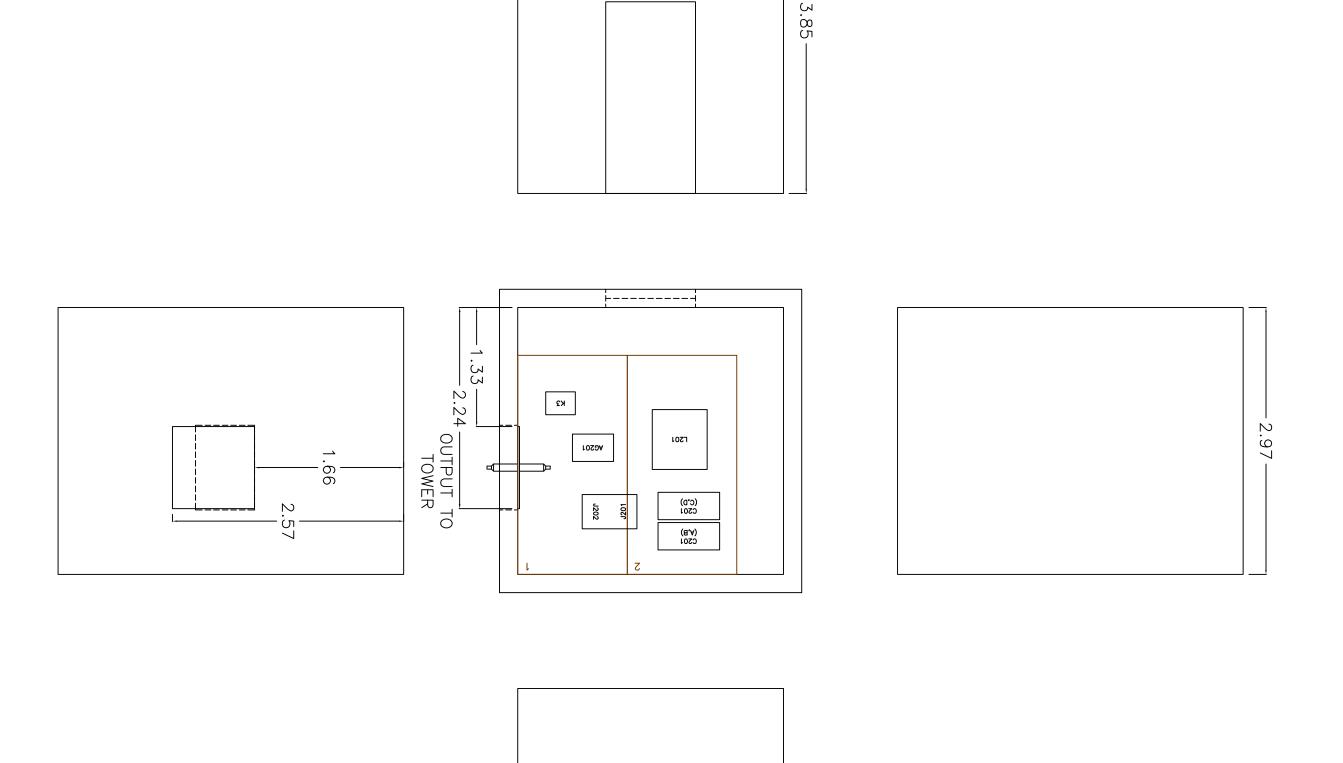

2.96

PRE-EXISTING ATU BUILDING

		KINTRONIC LABS, INC.	PARTY WITHOUT THE WRITTEN CONSENT OF	AND ARE NOT TO BE DISTRIBUTED TO ANY THIRD	INTELLECTUAL PROPERTY OF KINTRONIC LABS, INC.	2. THE CONTENTS OF THIS DRAWING ARE THE	UNLESS OTHERWISE SPECIFIED	1. ALL DIMENSIONS ARE INTERIOR AND IN METERS	NOTES:		
C-4258-SURP 28-Mar-13	ON DWD	16-Jan-14	REV	A-6230-SUR	KEL DWG:		AT	NAUTEL - /	COPYRIGHT 20		KINTE
28-Mar-13	DATE		DESIGNED:		ON BOL	918 kHz 300 kW	ATU SHELTER LAYOUT	<ul> <li>AIR SURATGARH PASSIVE SITE</li> </ul>	COPYRIGHT 2013 KINTRONIC LABORATORIES INC	BLUFF CITY, TN.	KINTRONIC LABORATORIES INC.
N.T.S.	SCALE:		APPROVED:	B.S.W.	DRAWN:	W	JUT	PASSIVE SITE	BORATORIES INC.	N.	RIES INC.

# **ATU Parts Lists**

#### Site Name – SURATGARH

AG1. 2-3/4"

AG-4-1.5B

AG2.

AG201.

Coils       (in μh)       (in A)         L1.       L65-80RA       65       80       Radial ARM inductor       Kintronic Line         L2.       L65-80RA       65       80       Radial ARM inductor       Kintronic Line         L3.       L48-100RA       200       40       Radial ARM inductor       Kintronic Line         L4.         A.       L125-40       125       40       Fixed Inductor       Kintronic Line	abs.
L1.       L65-80RA       65       80       Radial ARM inductor       Kintronic Land         L2.       L65-80RA       65       80       Radial ARM inductor       Kintronic Land         L3.       L48-100RA       200       40       Radial ARM inductor       Kintronic Land         L4.       A.       L125-40       125       40       Fixed Inductor       Kintronic Land	abs.
L2.       L65-80RA       65       80       Radial ARM inductor       Kintronic Line         L3.       L48-100RA       200       40       Radial ARM inductor       Kintronic Line         L4.       A.       L125-40       125       40       Fixed Inductor       Kintronic Line	abs.
L3. L48-100RA 200 40 Radial ARM inductor Kintronic L L4. A. L125-40 125 40 Fixed Inductor Kintronic L	
L4. A. L125-40 125 40 Fixed Inductor Kintronic La	aus.
A. L125-40 125 40 Fixed Inductor Kintronic La	
	ahc
B. L125-40 125 40 Fixed Inductor Kintronic Li	
L201. L220-40 220 40 Fixed Inductor Kintronic Li	
E201. E220 40 220 40 1/Act inductor kind one of	103.
Circuit Nomenclature Part No. Rated Capacitance Rated Voltage Component type Manufac	turer
Caps (in pF) (in kV)	
C1. CFHP-1000-50SC 1000 50 Fixed Vacuum Capacitor Jennings	
C2. CFHP-1000-50SC 1000 50 Fixed Vacuum Capacitor Jennings	
C3. CFHP-1000-50SC 1000 50 Fixed Vacuum Capacitor Jennings	
C4. CFHP-1500-35SC 1000 35 Fixed Vacuum Capacitor Jennings	
C5. CFHP-1500-35SC 1000 35 Fixed Vacuum Capacitor Jennings	
C6.	
A. CFHP-1500-50SC 1500 50 Fixed Vacuum Capacitor Jennings	
B. CFHP-1500-50SC 1500 50 Fixed Vacuum Capacitor Jennings	
C7.	
A. CV2C-1500E/40 1500 40 Fixed Vacuum Capacitor Comet	
B. CV2C-1500E/40 1500 40 Fixed Vacuum Capacitor Comet	
C. CV2C-1500E/40 1500 40 Fixed Vacuum Capacitor Comet	
D. CV2C-1500E/40 1500 40 Fixed Vacuum Capacitor Comet C201.	
a. CFC-150-AS 150 30 Fixed Vacuum Capacitor Jennings	
b. CFC-150-AS 150 30 Fixed Vacuum Capacitor Jennings	
c. CFC-150-AS 150 30 Fixed Vacuum Capacitor Jennings	
d. CFC-150-AS 150 30 Fixed Vacuum Capacitor Jennings	
d. Cre 150 AS 150 So Tixed Vacuum Capacitor Scinnings	
Circuit Nomenclature Part No. Rated Current Range Peak Modulation Voltage Component type Manufact	urer
Meters/TCTs (in A) rms/peak (in kV)	
TO 00 EVELLING 46.00	
M1. TCA-80-EXR-HV W 16-80 20/28 Toroidal Shielded Transformer Delta Electro M2. TCA-80-EXR-XHV W 16-80 42.4/60 Toroidal Shielded Transformer Delta Electro	
M2. TCA-80-EXR-XHV W 16-80 42.4/60 Toroidal Shielded Transformer Delta Electro	mics.
Circuit Nomenclature Part No Component type Arc Gap Rated voltage Manufacture	er
Arc Gaps	
AG1. AG1. 2-3/4" Variable Arc Gap .375" Nominal 80kV Nominal Kintronic Lab	S.

Variable Arc Gap

Variable Arc Gap

.625" Nominal

.5" Nominal

80kV Nominal

55kV Nominal

Kintronic Labs.

Kintronic Labs.

# **ATU Parts Lists**

Circuit Nomenclature	Part No	Component type	Manufacturer
J-Plugs/Switches			
K1.	K1 Contactor	Manual Ground Switch	Kintronic Labs.
K2.	K2 contactor	Manual Ground Switch	Kintronic Labs.
J1.	JP-ISJ	J-plug	Kintronic Labs.
J2.	JP-ISJ	J-plug	Kintronic Labs.
J3.	JP-ISJ	J-plug	Kintronic Labs.
J201.	JP-BD1	J-plug	Kintronic Labs.
J202.	JP-BD2	J-plug	Kintronic Labs.



# KINTRONIC LABS, INC.

# Factory Pre-Tuning Certificate NAUTEL - All India Radio

SITE NAME:

Suratgarh

POWER:

300 kW

FREQUENCY:

918 kHz

#### **Load Simulator Impedances:**

	Target Values:	Measured Values:
908 kHz 918 kHz 928 kHz	180.3 + j180.8 191.8 + j187.0 199.2 + j189.2	180.6 + j187.0 191.8 + j187.0 199.3 + j188.9
	J	J100.

#### Input Impedances:

	At Transmitter Finals*		At Input of A	At Input of Antenna Tuning Unit			
	Predicted Z	<b>SWR</b>	Predicted Z	SWR:	Measured Z	SWR:	
908 kHz	6.0 + j2.8	1.022	118.8 - j1.0	1.013	119.7 - j1.7	1.015	
918 kHz	5.9 + j2.8	1.000	120.0 + j0.0	1.000	120.0 - j0.2	1.002	
928 kHz	5.9 + j2.7	1.017	118.6 + j4.7	1.042	119.0 + j5.9	1.051	

Tuning Engineer:

flende, De

Robert A. Elder

Date:

13 January 2014

PHONE: 1.423.878.3141 FAX:1.423.878.4224 www.kintronic.com

<sup>\*</sup> NOTE: ATU sideband performance is designed to provide predicted performance at TX finals.